

Hamilton Beach® Egg Cooker



Product Name/MSRP:
Hamilton Beach® Egg Cooker
Model 25500, MSRP: \$19.99

Availability
August 2013

Toll-Free Number and Web Site
800-851-8900; www.hamiltonbeach.com

Media Contact
Mary Beth Brault 804-418-8868
marybeth.brault@hamiltonbeach.com

 <http://facebook.com/hamiltonbeach>
 [@HamiltonBeach](https://twitter.com/HamiltonBeach)
 <http://youtube.com/hamiltonbeachbrands>

Press Room
Go to www.hamiltonbeach.com and click "press room."
Images of Hamilton Beach® products online at
<http://www.hbps-imagebank.com>



Good Thinking® Features

Perfect Eggs, Every Time – Prepare soft, medium or hard-cooked eggs with the 7-egg capacity Egg Cooker.

Includes 3-egg Nonstick Poaching Tray – for expertly poached eggs made in minutes.

Ready Timer with Tone – To let you know when your cooked or poached eggs are ready to eat.

Includes Water Measuring Cup and Egg Piercing Tool – Take the guesswork out of preparing eggs when you measure the exact amount of water needed to cook.

How to Make Poached Eggs

1. Fill water-measuring cup with cold water to the MEDIUM 4 line.
2. Pour water into center of water reservoir. Always make sure the center of reservoir is filled first before outer ring. NOTE: Always use cold water.
3. Place egg holder and then poaching tray on top of heating unit. Lightly spray poaching tray with nonstick cooking spray.
4. Crack large eggs, one at a time, into each poaching section. You can poach 3 eggs at one time.
5. Cover with lid. Press the ON (I) switch. Red light will be lit. Eggs will cook about 6 to 8 minutes.
6. The unit will sound when the water has evaporated. Press the OFF (O) switch.
7. Remove eggs. Serve immediately.